


Available spare parts highlighted in **RED**

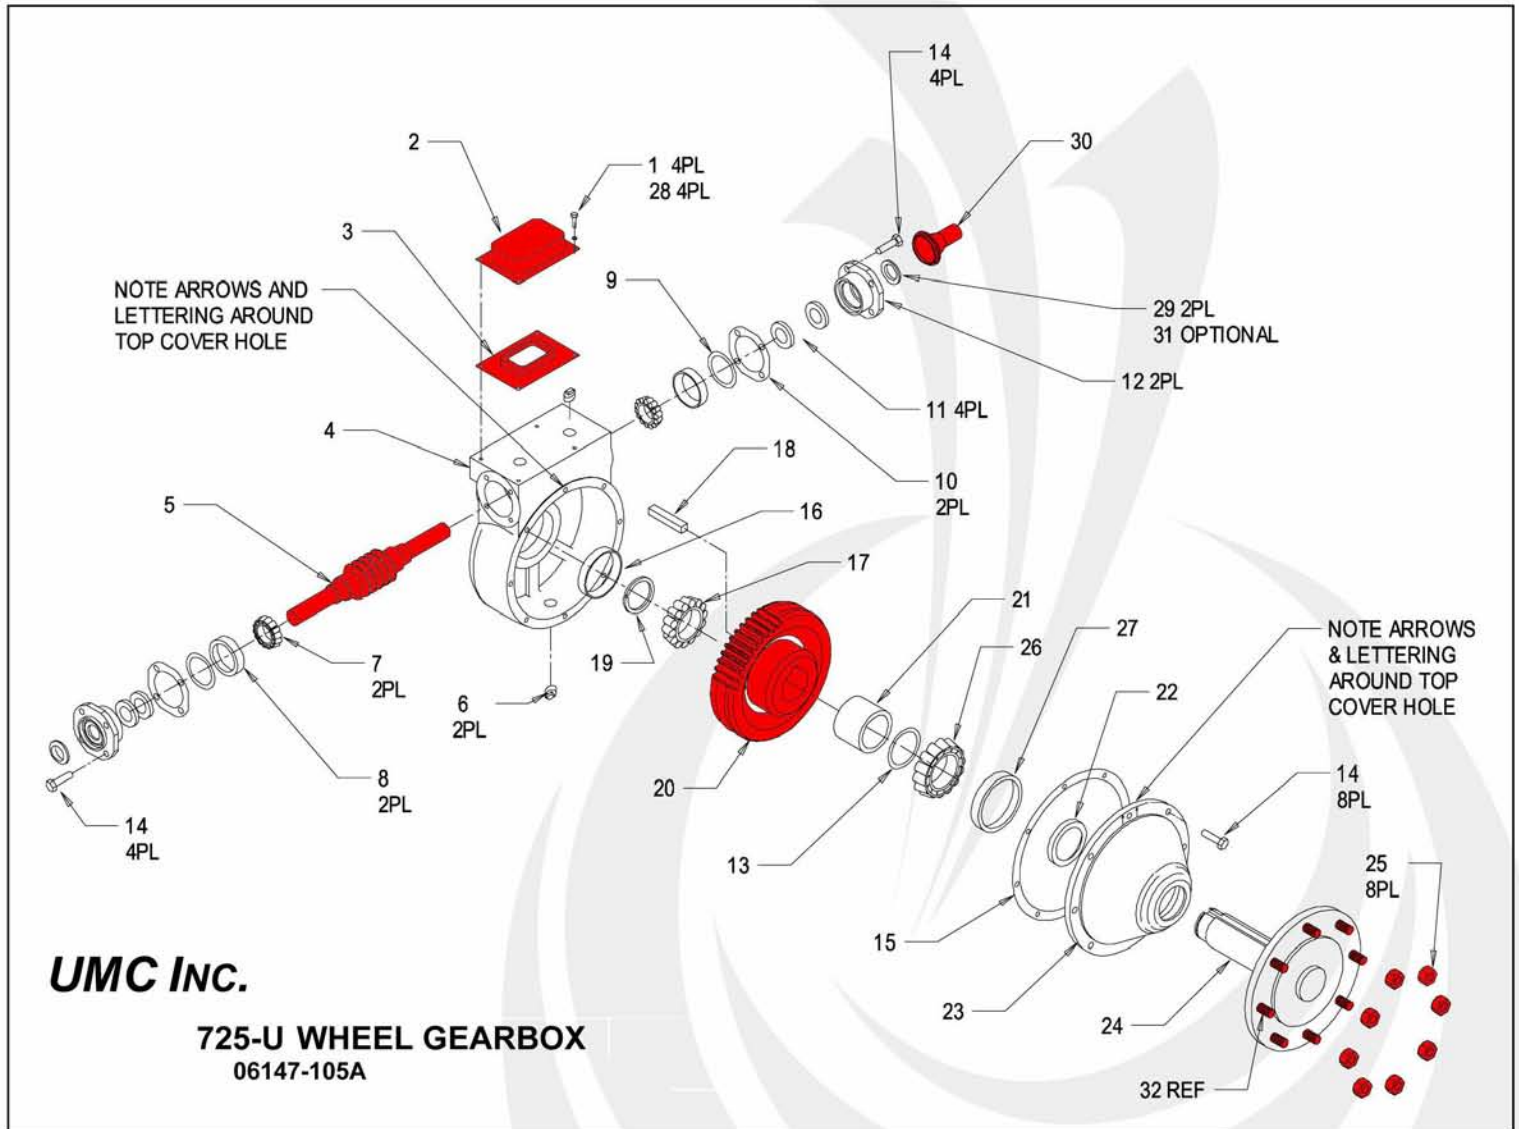

06147-105A 725-U 50:1		WHEEL GEARBOX 725-U RETAIL PARTS / MATERIAL LIST	
ITEM	QTY	DESCRIPTION	PART #
1	4	SCREW, HEX HEAD CAP ¼-20 x .75	06141-801A
2	1	COVER, EXPANSION CHAMBER (STEEL)	06143-205D
3	1	DIAPHRAGM, RUBBER (STEEL COVER)	06143-704A
4	1	HOUSING, DRIVE UNIVERSAL	06146-201A
5	1	WORM, UNIVERSAL 50:1	06147-202A
6	2	PLUG, PIPE ½" NPT	06141-803A
7	2	BEARING, CONE 1.1875" ID	06141-804A
8	2	BEARING, CUP 2.5312" OD	06141-805A
9	A/R	SHIM, INPUT (VARIOUS SIZES)	06141-209*
10	2	GASKET, END CAP	06147-704A
11	4	SEAL, OIL 1.00 X 2.000 X .325 DBL LIP (INPUT)	06143-705A
12	2	CAP, END	06147-204A
13	A/R	SHIM, O/P 2 ¼" ID (VARIOUS SIZES)	06145-203*
13	-	SHIM, O/P 2 ½" ID (VARIOUS SIZES)	06148-204*
14	16	SCREW, HEX HEAD CAP 3/8-16 x 1.0 LONG	06141-802A
15	1	GASKET, COVER (10.19)	06141-706A
16	1	BEARING, CUP 3.250" OD	06143-802A
17	1	BEARING, CONE 2.000" ID	06141-806A
18	1	KEY, ½ SQ x 2.88 LONG	06141-809A
19	1	RING, SNAP 1.880" ID	06141-808A
20	1	GEAR, UNIVERSAL 50:1 2 ¼" ID	06147-209A
21	1	SPACER, SHAFT 2 ¼ " ID	06149-205A
22	1	SEAL, OIL 2.250 X 3.000 X .43 TRP LIP OP	06145-701E
23	1	COVER, GEARBOX 2 ¼" INT RIB	06147-211A
24	1	SHAFT ASSY, O/P 2 ¼" THRU GEAR	06147-104A
25	8	NUT, LUG 9/16-18	06142-801A
26	1	BEARING, CONE 2 ¼" ID	06145-802A
27	1	BEARING, CUP 3 13/16" OD	06145-801A
27	-	BEARING, CUP 4.3307" OD	07710-801A
28	4	WASHER, LOCK SPRING ¼"	06147-802A
29	2	SEAL, SHAFT FACE RUBBER 1"	06147-707A
30	1	GUARD, SHAFT	06147-218A
31**	2	SEAL, SHAFT FACE METAL ENCLOSED 1"	06147-705A
32***	8	BOLT, RNCB 9/16-18 x 1 5/8 LG	06143-801A